



1. Фиксирайте основата с водачите с винтове, както е показано

Внимание, водачите трябва да са подравнени добре и успоредни един на друг.

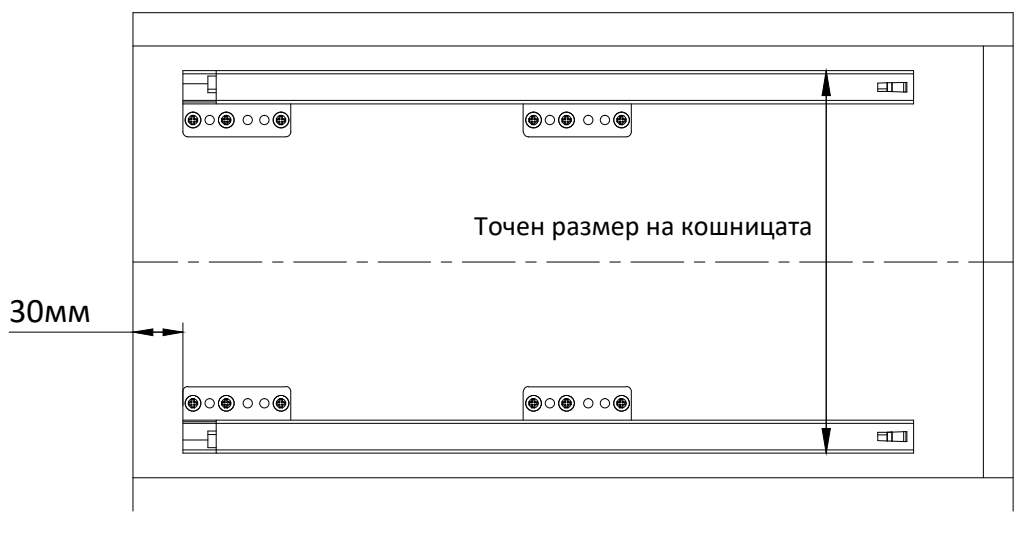


2. Поставете и закрепете кошницата, както е показано

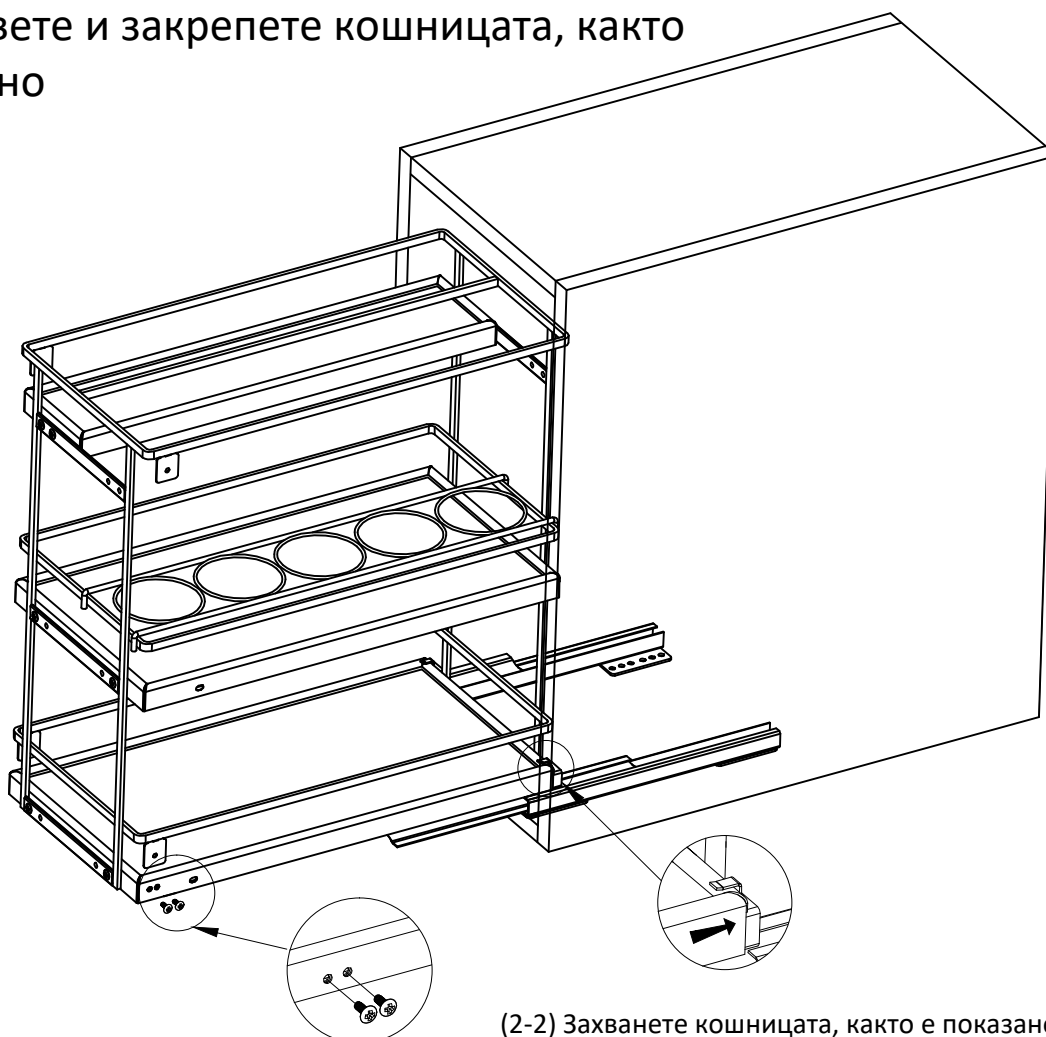


(2-2) Захванете кошницата, както е показано

(2-3) Фиксирайте кошницата с винтовете и се уверете, че се движи гладко и плавно.

3. Извадете кошницата и измерете разстоянието между А и В

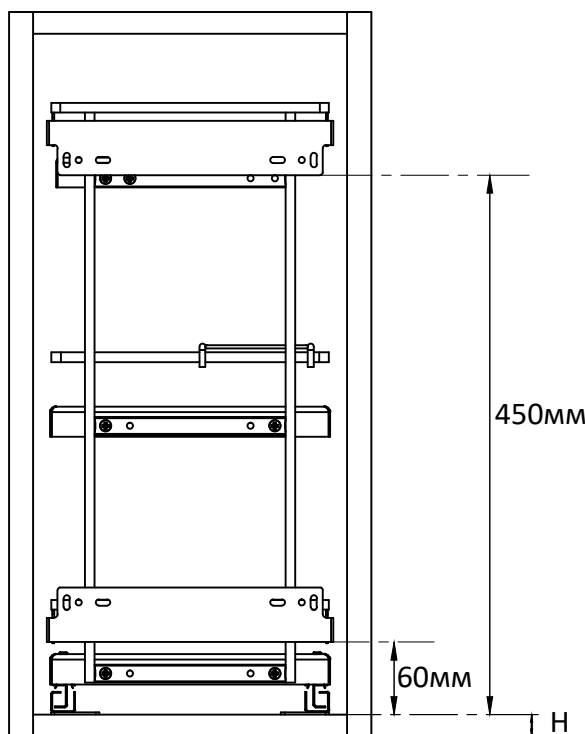


(3-1) Извадете кошницата от рамката и измерете разстоянието между А и В на предния панел

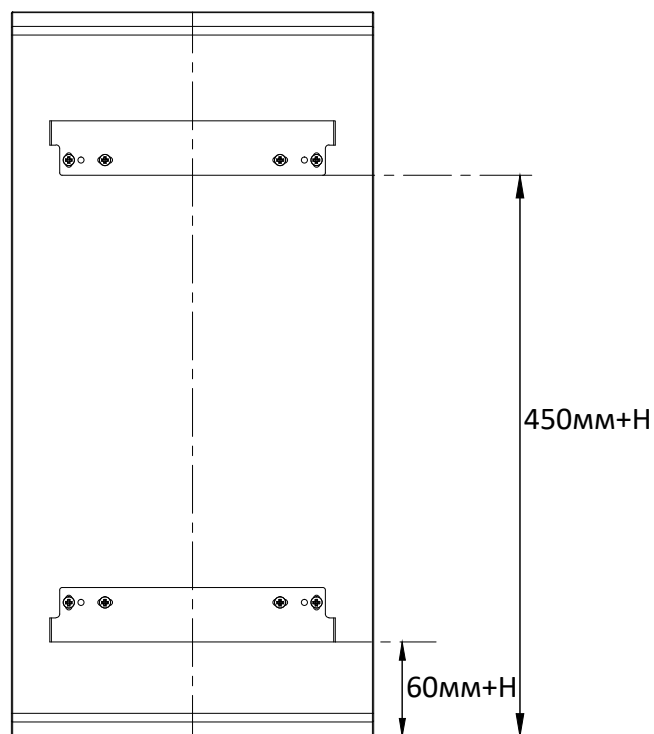


(3-2) Фиксирайте планките с челния панел.


4. Фиксирайте с винтове, както е показано

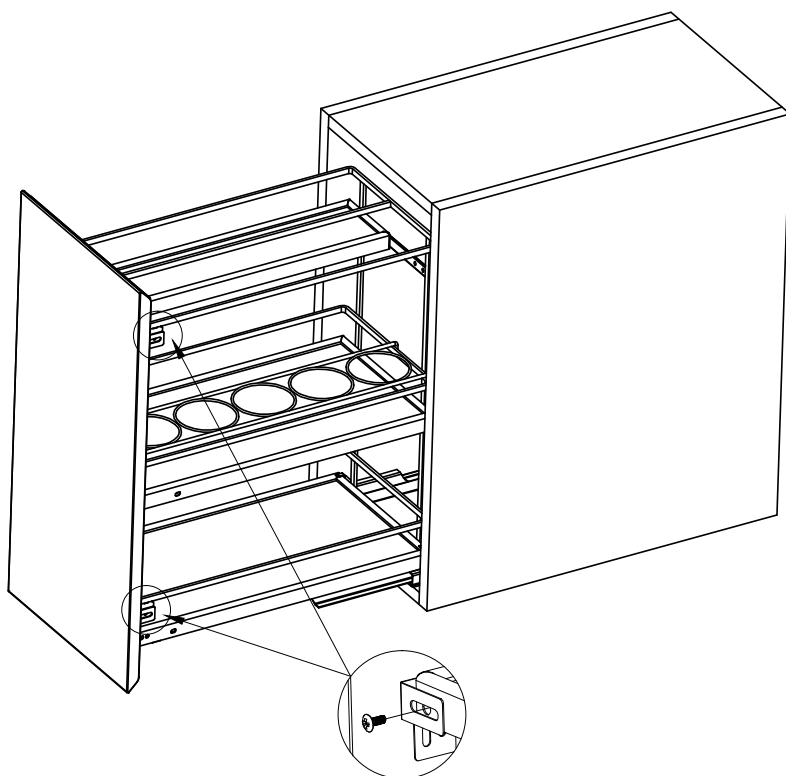

1. Fixing with the screws as shown

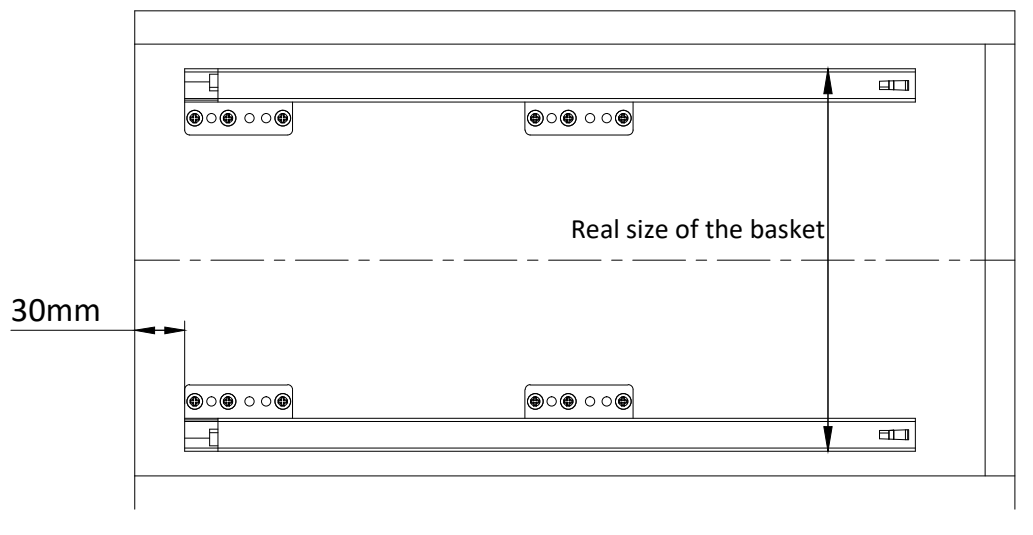


2. Fixing basket as shown

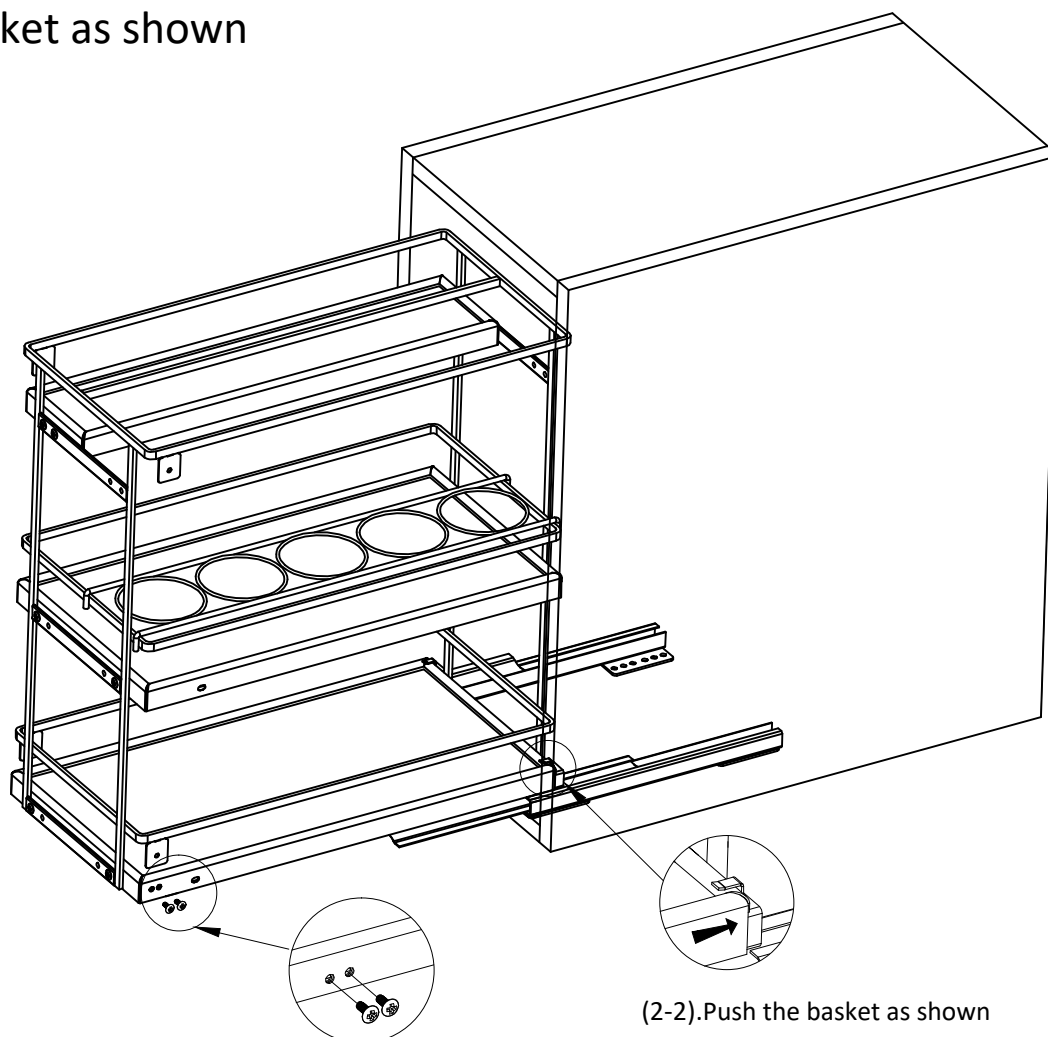


Mounting instructions for 3 levels kitchen basket for cabite 300/350/400/450 mm

CTX 147/ CTX 148/ CTX 149/ CTX 150

3. Put out the basket and measure the A and B 's distance.

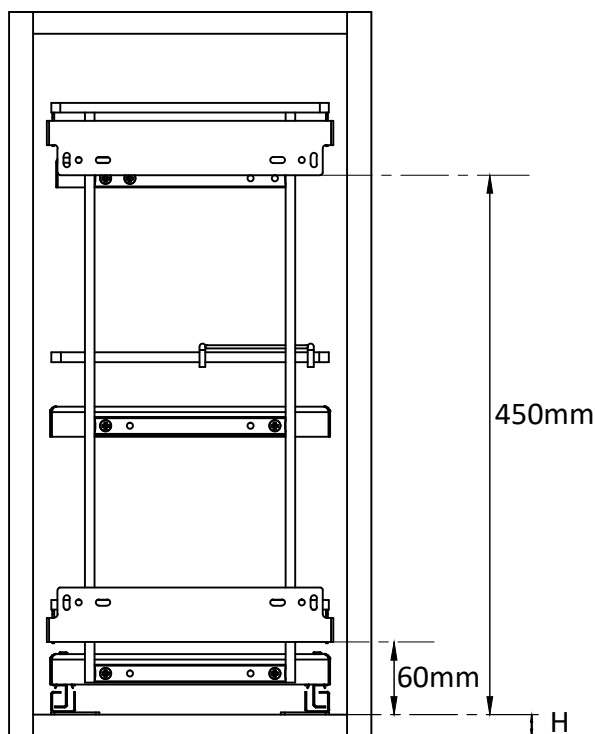


(3-1). Take out the connection from the basket and measure the A and B 's distance on the front panel

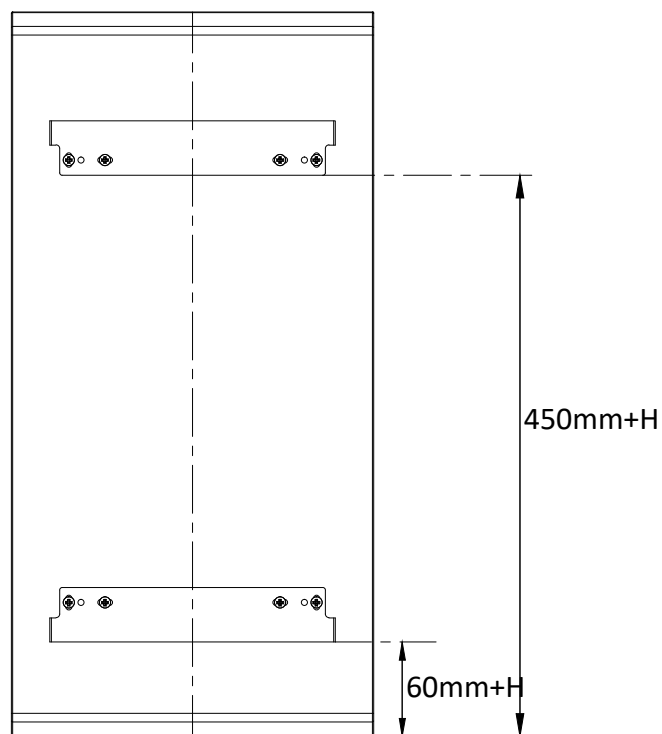

(3-2). Then fix the the connections with panel.

4. Fixing with the screws as shown

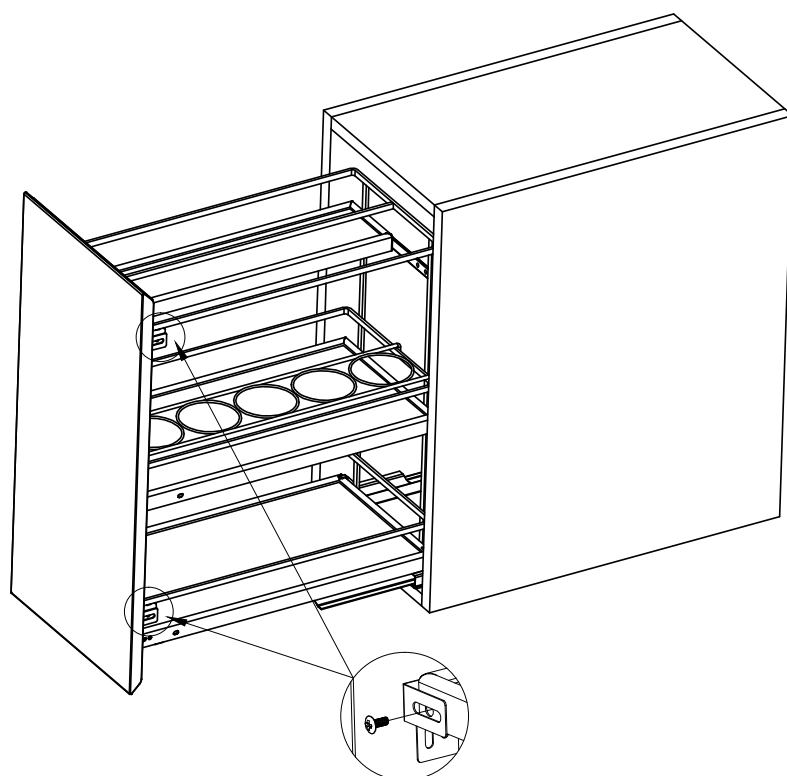

Imported by
DikamD
FURNITURE ITEMS

Sofia, Bulgaria
185B Suhodolska str.
Tel. +359 2 492 20 00
www.dikam.com